













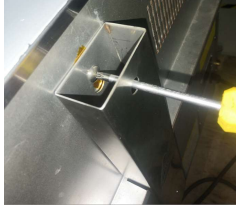



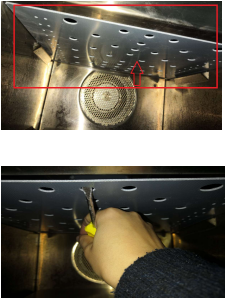

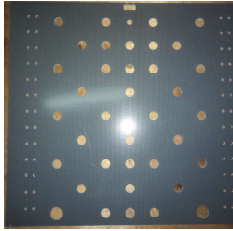
## MICRO-1217HS -Regular Cleaning and Maintenance

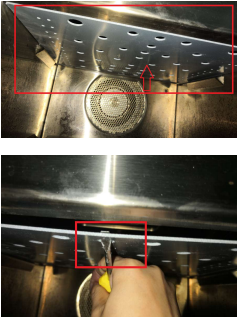
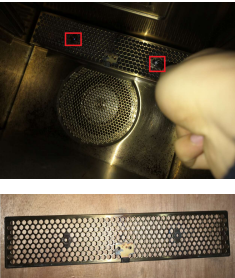
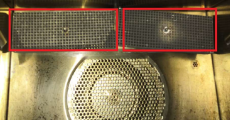
The following daily cleaning suggestions help to better maintain your NT-ProSiT oven. Use special cleaners and tools for the oven.


Cleaning with corrosive cleaners or metal tools will cause damage to key parts and is not covered by the warranty.

Tools: detergent, rubber gloves, non-abrasive nylon scrubbing pad, rag, brush, goggle, dust mask, cross screwdriver, 7mm socket wrench.

<p><b>1. Prepare oven</b></p> <ul style="list-style-type: none"><li>-Keep the oven in an idle state</li><li>-Open the oven door</li><li>-Press the "Shutdown" button for 3 seconds to enter the rapid cooling state, about 15 minutes to finish cooling, and then turn off the power.</li></ul>		<p><b>6. Clean the inner chamber, door inner panel, outer shell, control panel</b></p> <ul style="list-style-type: none"><li>-After cleaning up the grease and food scraps in the oven cavity and door inner panel, wipe it again with a clean damp cloth, and at the same time wipe the shell and control panel</li></ul>	
<p><b>2. Take out the oven shelf and pan, spray detergent on the surface.</b></p> <ul style="list-style-type: none"><li>-Allow the cleaning agent to penetrate for about 10 minutes</li></ul>		<p><b>7. Clean the oven shelf and pan</b></p> <ul style="list-style-type: none"><li>-  Note: Do not use steel wool</li></ul>	
<p><b>3. Use a damp cloth to clean up the food debris in the inner chamber</b></p>		<p><b>8. Clean the filter at the bottom (approximately every week)</b></p> <ul style="list-style-type: none"><li>-Pull out the filter at the bottom</li><li>-Use a dry brush to clean the filter</li><li>-  Do not rinse the filter in water, otherwise it will damage the filter</li></ul>	
<p><b>4. Clean the grease on the inner chamber and door inner plate</b></p> <ul style="list-style-type: none"><li>-Use a non-corrosive cleaning agent to spray on the heavily greased places, such as the side of the inner chamber and the door inner panel.</li><li>-Allow the cleaning agent to penetrate for about 10 minutes-  -Note: Do not use corrosive cleaners on any part of the oven, otherwise it will cause permanent damage to the oven</li></ul>		<p>-  Note: Do not use a lot of water to rinse the oven, otherwise it will cause damage to the oven.</p>	
<p><b>5. Clean the grease on the inner chamber and door panel</b></p> <ul style="list-style-type: none"><li>-Use non-abrasive nylon scrubbing pads or brushes to clean up heavy grease chamber</li><li>-  Note: Do not use steel wool</li></ul>			
<p><b>9. Clean the oil tank at back.</b> Loosen the fixed screws with a cross screwdriver, lift the oil tank up, and take out the oil tank.</p> <p>Then pour out the oil and water in the oil box, clean it with detergent and water and dry it.</p>			

<p><b>10. Clean the upper hot air board.</b> Remove the upper hot air board, as shown in the picture on the right, spray non-corrosive cleaning agent on the surface of the upper hot air board, and wipe it clean.</p> <p> Do not put the upper hot air board into water to rinse, otherwise it will cause damage</p>			
---	---	--	---

<p><b>11. Replace the catalytic converter</b></p> <p>-For roasting meat, it is recommended to replace it every 3 months. For reheating bread, it is recommended to replace it every six months.</p> <p>First, remove the upper hot air board, and then remove the catalyst protection plate with a 7mm socket wrench, replace the catalytic converter, and then put back the protection plate</p>			
---	--	---	--

<p><b>12. Put the accessories back into the oven one by one and start the oven to dry</b></p> <p>-Put the removed oven accessories back on the oven one by one</p> <p>-Start the oven to dry the water stains on the oven and accessories, turn off the oven</p>	
--	---