

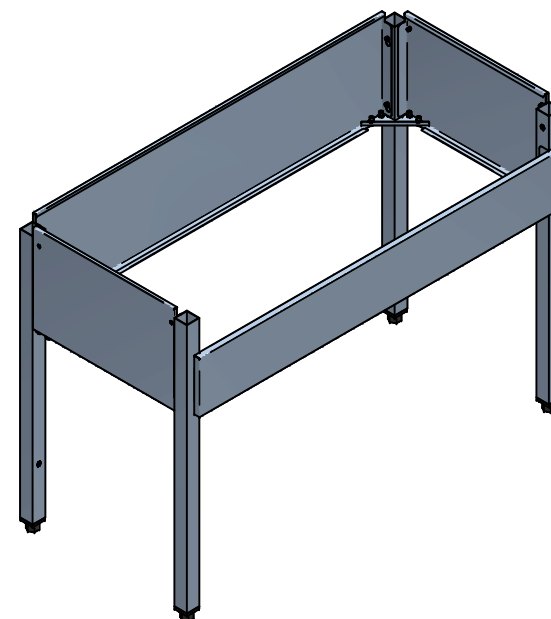
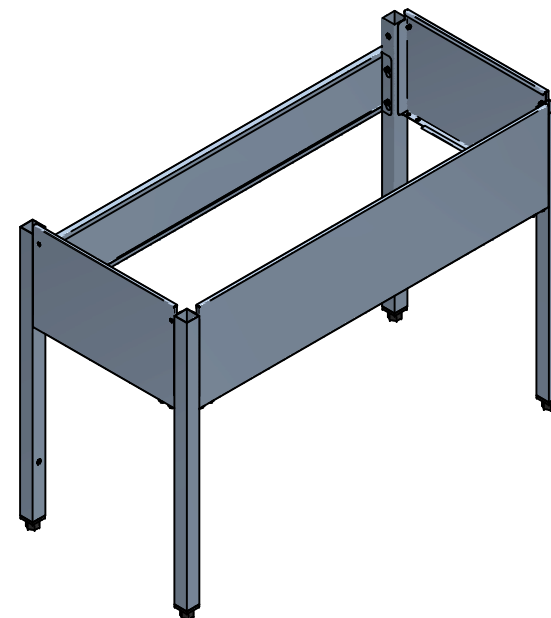
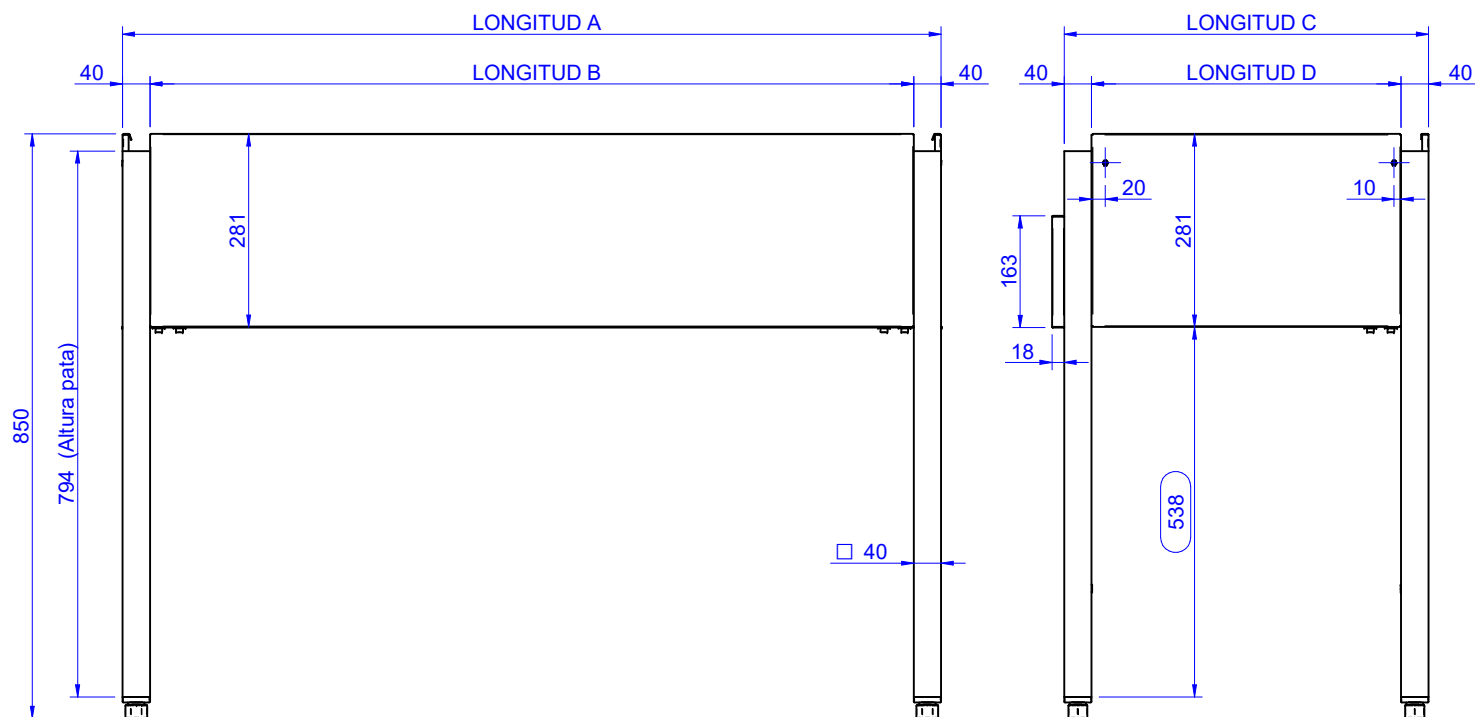
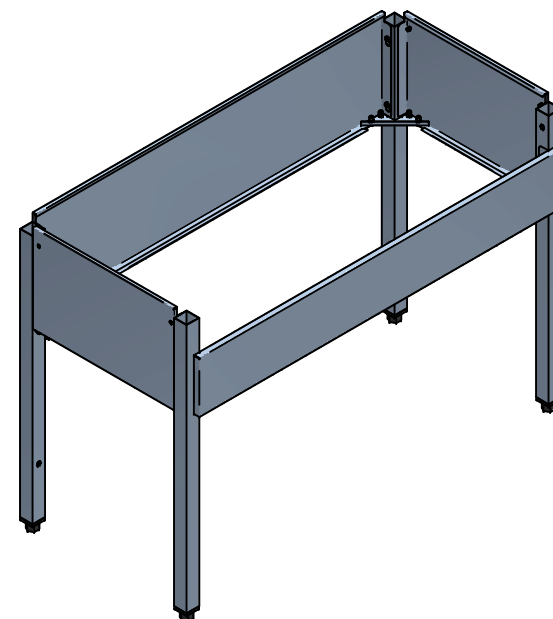


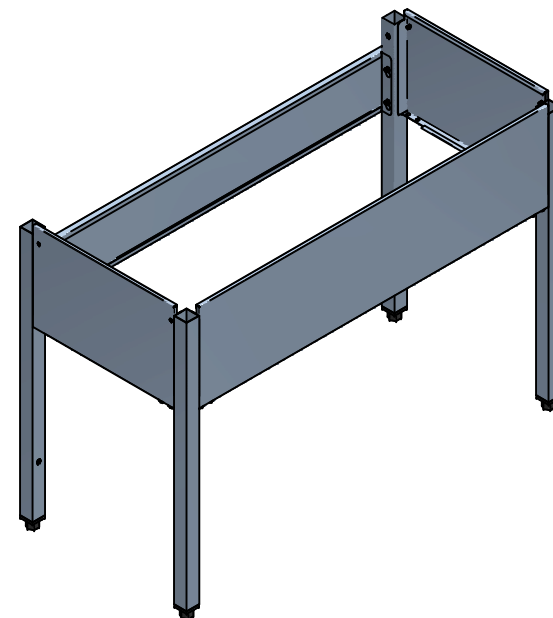



PROFUNDIDAD 600mm

CÓDIGO	MODELO	MEDIDAS FREGADERO	LONGITUD A	LONGITUD B	LONGITUD C	LONGITUD D
19004722	BF-66	600x600mm	591	511	530	450
19004747	BF-76	700x600mm	691	611	530	450
19004772	BF-106	1000x600mm	991	911	530	450
19004779	BF-126	1200x600mm	1191	1111	530	450
19004767	BF-136	1300x600mm	1291	1211	530	450
19004780	BF-146	1400x600mm	1391	1311	530	450
19004804	BF-166	1600x600mm	1591	1511	530	450
19004809	BF-186	1800x600mm	1791	1711	530	450
19004828	BF-206	2000x600mm	1991	1911	530	450

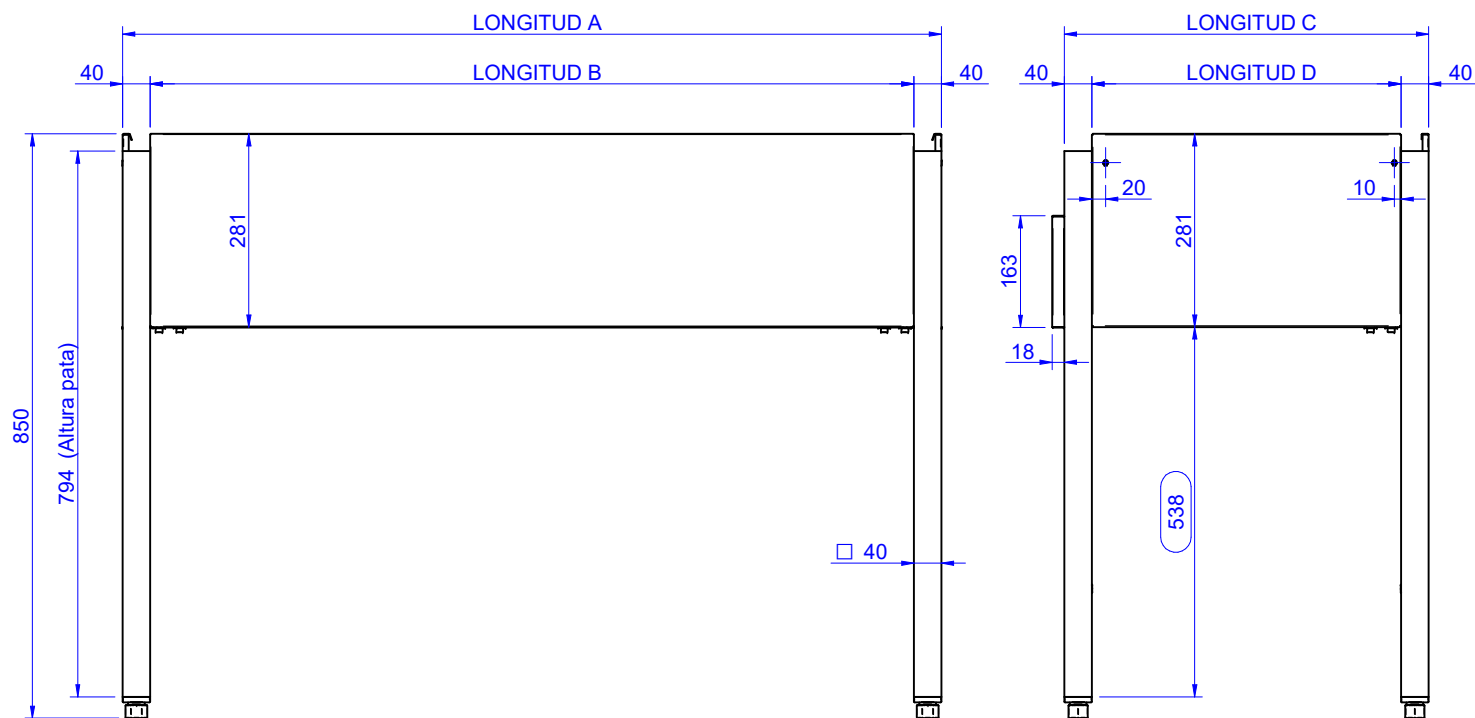

PROFUNDIDAD 700mm

CÓDIGO	MODELO	MEDIDAS FREGADERO	LONGITUD A	LONGITUD B	LONGITUD C	LONGITUD D
19004723	BF-77	700x600mm	691	611	630	550
19004730	BF-87	800x700mm	991	911	630	550
19004773	BF-107	1000x700mm	1191	1111	630	550
19004812	BF-127	1200x700mm	1291	1211	630	550
19004838	BF-147	1400x700mm	1391	1311	630	550
19004871	BF-167	1600x700mm	1591	1511	630	550
19004887	BF-187	1800x700mm	1791	1711	630	550
19005001	BF-217	2100x700mm	2091	2011	630	550

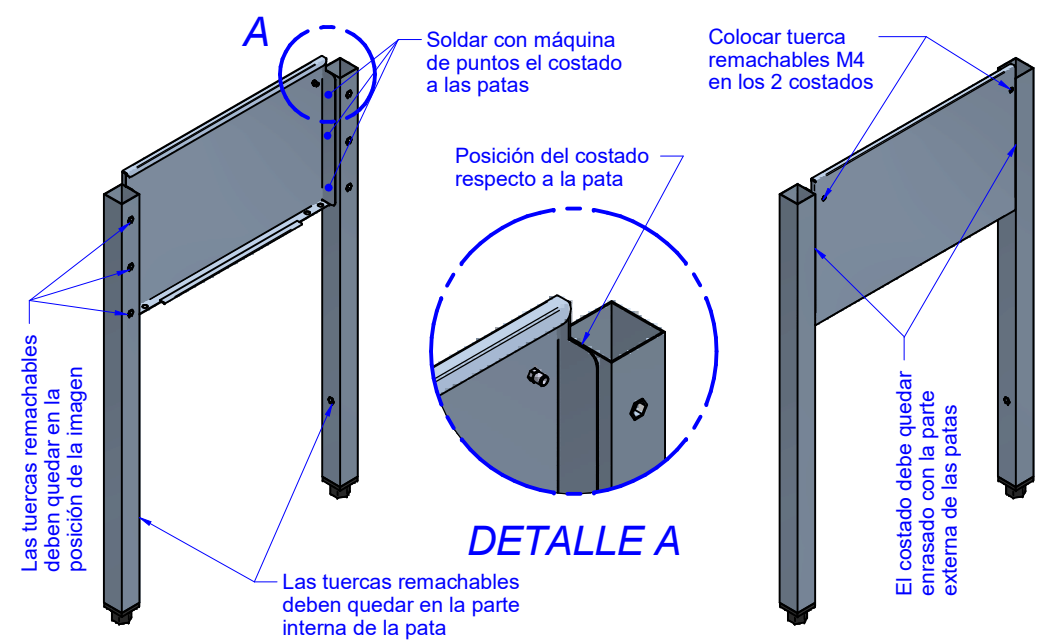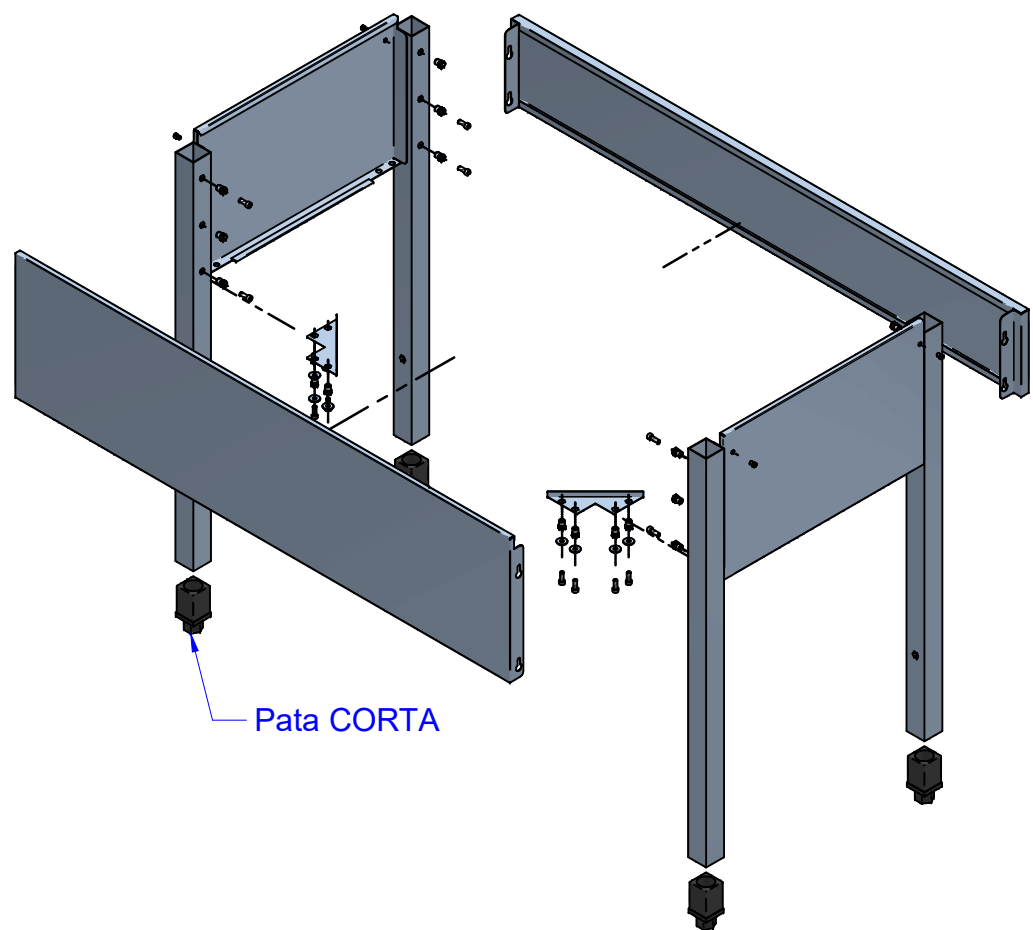

La parte inferior de los costados debe quedar a la misma altura respecto a la parte inferior de las patas para poder instalar las escuadras de fijación

